## @ DELETEIFINPUT

The value or string parameter attribute @DELETEIFINPUT is used to make sure that upon restarting a solution, parameters provide as input with this attribute are deleted from the solution.

## **Syntax**

Place @DELETEIFINPUT in the data slot of the parameter

## **Remarks**

This allows the removal of input parameters that are not needed anymore or have to become computed instead of input.

Member of functional group: Modeling

Member of knowledge base type: Classic and general type

Quick links: Function overview | Attribute overview | Constants overview | Dimensions overview

Copyright © 2022, MARIN Page 1 of 1