## Window > Standard

Resets your present window layout to the layout as discussed for different user levels in Quaestor Interface.

Quaestor Interface

Copyright © 2022, MARIN Page 1 of 1