

# Tutorial 1: Getting Started

<b>Tutorial 1</b> <b>Getting started</b>	<b>Learning goals</b> <ol style="list-style-type: none"><li>1. Getting familiar with Quaestor interface.</li><li>2. Adding parameters, relations and constraints.</li><li>3. Providing references and properties for parameters.</li><li>4. Creating a multiple case solution.</li></ol>	<b>Prior knowledge</b> <ol style="list-style-type: none"><li>1. <a href="#">Interface</a></li></ol>	
---	--	---	--

## 1 Objective

As mentioned earlier these tutorials are focussing on providing the basic skills of [knowledge engineering](#). In this first tutorial, the main dimensions of a ship will be systematically varied. The knowledge used is Archimedes' Law in combination with design requirements, which are the following:

The ship should have

- a displacement of at least 2000 t, but less than 3000 t;
- a draft of 6 m.

Our objective is to generate a dataset of systematically varied ships that meet the design requirements.


## 2 Before you start

Before starting with your [knowledge engineering](#), please make sure you are actually using the knowledge engineering [user level](#) and you have Quaestor configured in the most convenient layout.

To check/change your user level go to *Tools -> Options -> General*. You can change your User level. If you are not able to change it to Knowledge Engineer (level 3), you do not have [KE](#) rights. Please contact your ICT department or Knowledge for the proper license.

## 3 Creating parameters


When Quaestor is started, you are presented with the opening screen, with no knowledge base or project loaded:

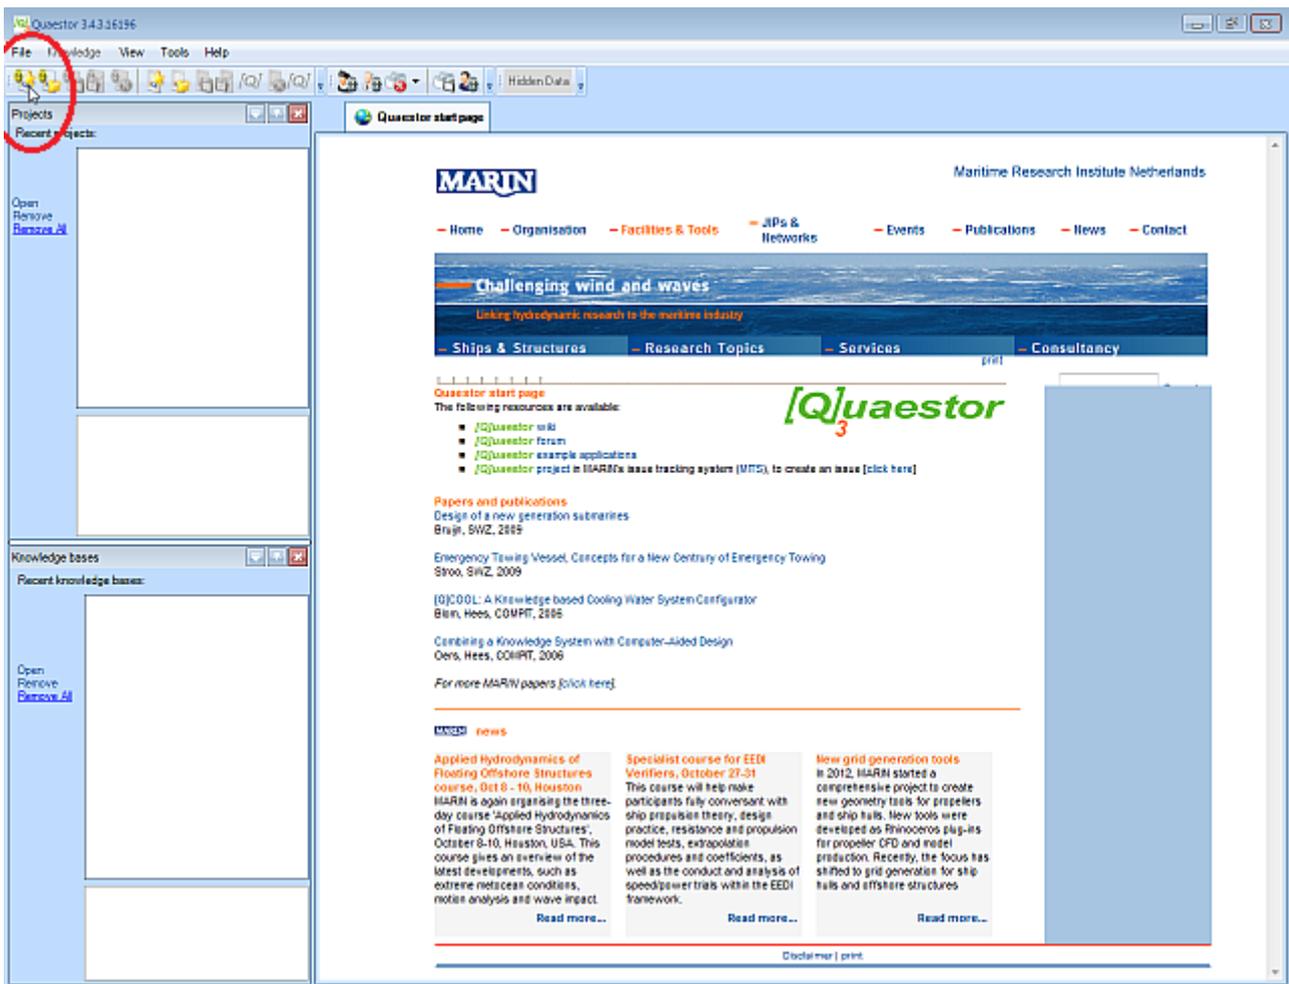

To create your first knowledge base

- Select *File* -> *New* -> *Knowledge base* or click on the leftmost button in the toolbar.

The screen changes to the main Quaestor knowledge engineering screen:

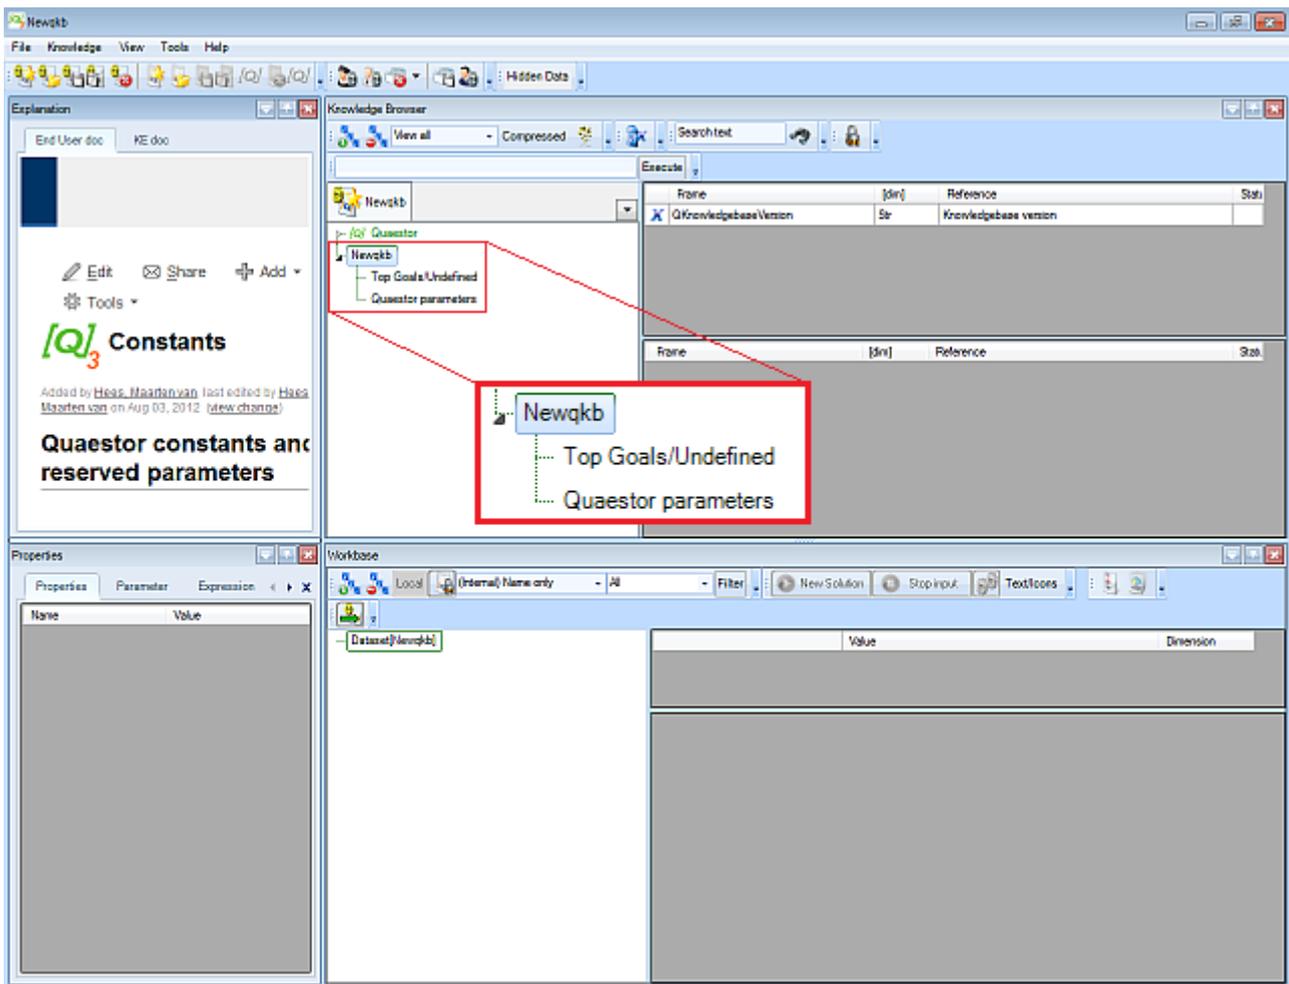

When a knowledgebase node is expanded, like *Newqkb* here, the **classes** within the knowledgebase are visible. Classes are used to organise your data and equations, and put them in a practicable structure. In Quaestor, all data is put in *parameters*. You can designate one (or more) parameter as the goal of the calculation.

**!** Classes are a means for organizing parameters for the user. They are not to be confused with a class in object oriented computer programming. The Quaestor core does not use the classes at all. It only uses the parameters!


The *Top Goals/Undefined* class is part of the knowledge base by default. Here, the goal parameters of your calculation (Top Goals) can be stored, as well as other parameters that don't belong to other classes (Undefined).

Create a new class, named *Main Dimensions*, in which the following ship parameters are to be stored.

- Lpp**: Length between perpendiculars
- B**: Moulded breadth
- T**: Draught from keel to Construction Water Line


- Right-click on *Top Goals/Undefined* and select *New Class* from the popup menu. Give the class the name *Main Dimensions*.

Sub classes can be defined by right clicking on any class name and again selecting *New Class*.

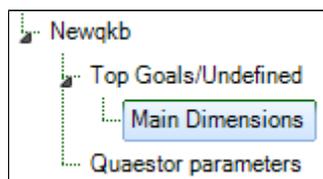

The class is now shown in the knowledgebase tree, and you can add the parameters *Lpp*, *B* and *T*.

- Select the class `Main Dimensions` and select *Knowledge* -> *New parameter/function* from the main menu. Alternatively, click in the right part of the **knowledge browser**, and select *New Parameter / Function (Ctrl+I)*. Give the parameter the name `Lpp` and click the *Value* button to select its type. Repeat these actions for the parameters `B` and `T`.

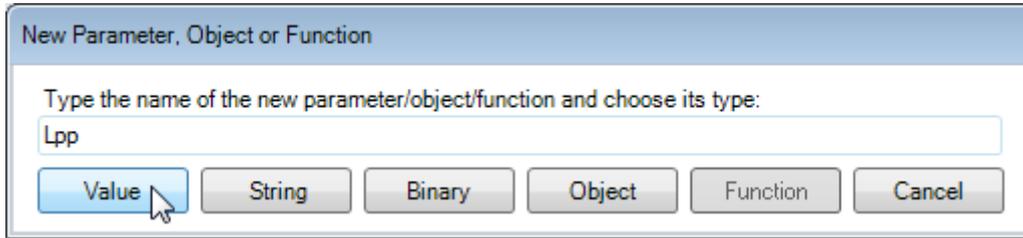

The added parameters now appear in the right part of the Knowledge browser like this:

	Frame	[dim]	Re
	B	[?]	
	Lpp	[?]	
	QKnowledgebaseVersion	Str	Kn
	T	[?]	

A red cross draws your attention to the fact that a parameter is not yet fully defined for the system to use it.




The first requirement is already satisfied, so let's assign dimensions to the parameters.

- Select the `Lpp` row in the [Knowledge Browser Window](#). In the [Properties window](#), scroll down to the *Dimension* row and change the `?` into `m`, the dimension for `Lpp` (meters).

You can also add a **reference** for a parameter. A proper reference is important, as users of the knowledgebase may not be certain of the exact meaning of the parameter. Please also read [Documentation of knowledge](#) for more details.


- Scroll down to the *Reference* row and enter "length of ship".

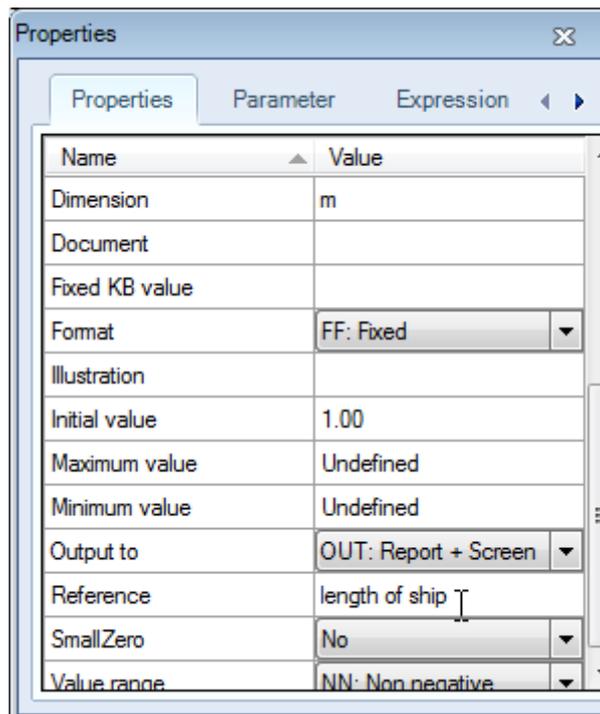

- Assign a dimension and a reference to the other parameters  $B$  and  $T$ , just as described above. Of course, the breadth and depth of the ship are defined in meters.

Now only the last requirement for valid parameters has yet to be fulfilled: a way to be determined (input from the user or defined by a relation). This qualification can be provided in the [Properties window](#).

- Select the parameter  $L_{pp}$ . In the Properties window, scroll down to the *Determined by* row. Change the value to *VR: User only*, as the parameter  $L_{pp}$  is input (instead of defined by a relation).

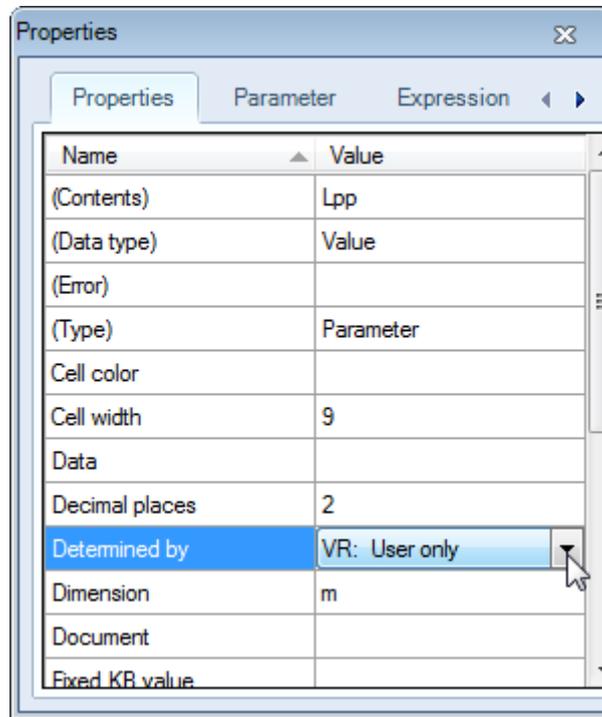

Notice that now, the status of the  $L_{pp}$  parameter has changed to

	$L_{pp}$	[m]	length of ship
--	----------	-----	----------------

to show that Quaestor knows enough about this parameter to use it in a computational model. Now make sure that  $B$  and  $T$  are determined by *VR: User only* too. By the way, VR stands for Value Requested.



If a parameter still shows a red cross when you have provided all needed property values, click on *Top Goals/Undefined*, and you will see the blue cross.

Note that above you have explicitly added  $L_{pp}$ ,  $B$  and  $T$  as parameters to the knowledge base. You are also able to implicitly add parameters by creating relations that contain new parameters. Quaestor will automatically add these new parameters to your knowledge base (so, implicitly). You will encounter this in the following section.

- Save your knowledge base with the name `Tutorial 1`, by selecting *File -> Save as*.


## 4 Creating relations

In order to define the loading capacity of the ship, it's important to know the kind of water (Salt or Fresh) the ship will sail in. Therefore, you're going to add some **relations** and **constraints**, and make sure the user can select the watertype. Two relations must be added, one for salt water and one for fresh water.

- Select *Top Goals/Undefined* in the knowledge browser, right click in the right hand part of the window and select *New Relation (Ctrl+N)*. In the upper part of the new window, delete any proposal (Quaestor may have filled in the last selected parameter), and enter

$\rho = 1025$

(belonging to salt water), and click *Save*:

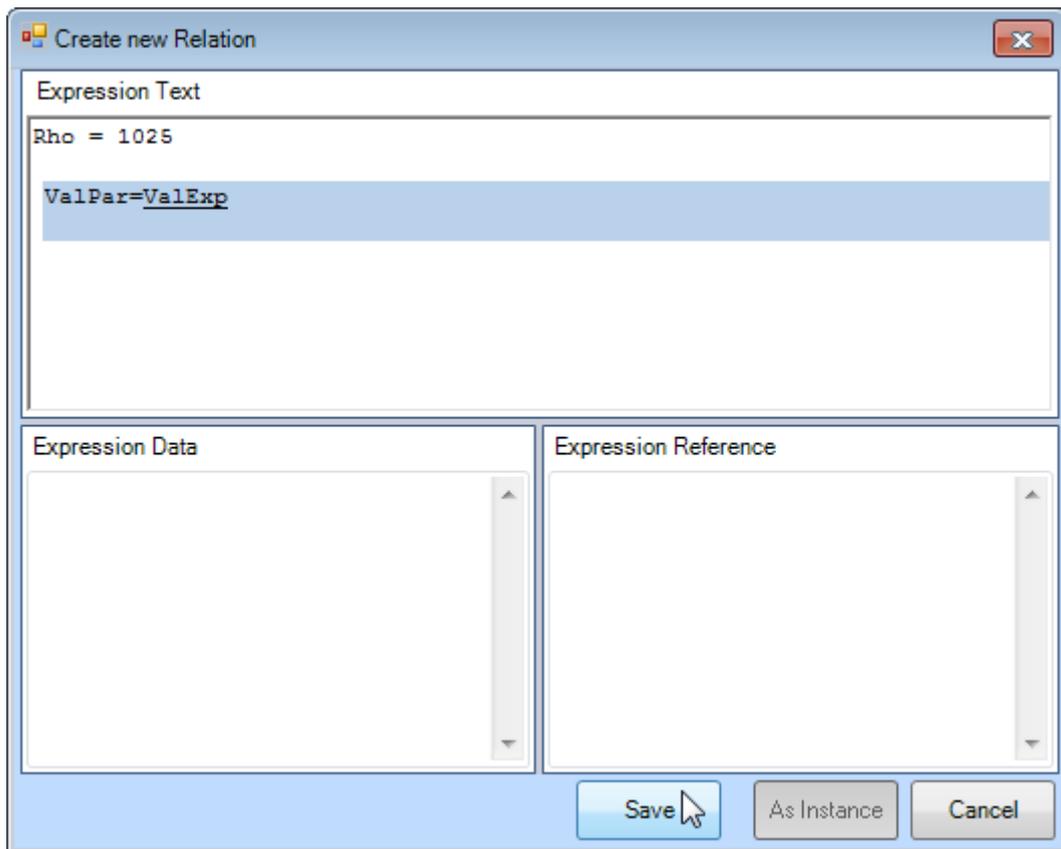

Note that when you enter a relation, Quaestor provides as much help as possible by means of the **Help Checker**. This checker shows what to expect (in this case a Value or an Expression, [ValExp](#)). After saving a relation, the Help Checker will check the syntax for possible errors, and shows a warning message when something is wrong.

Because of entering the relation, the parameter  $\rho$  has automatically been created. For  $\rho$  to be a valid parameter, a dimension should be assigned.

**i** The parameter is automatically created in the Class in focus when saving the relation!

- Provide a reference for  $\rho$  and assign it the dimension  $\text{kg}/\text{m}^3$ .  $\rho$  is now a valid parameter. Furthermore, make sure  $\rho$  is determined by *SYS: System/Equation*, as a relation is used to determine  $\rho$ .

What follows now might seem a bit unconventional: a second relation is given for  $\rho$ . This is a nice example of how Quaestor works: in a calculation, Quaestor can find numerous calculation paths and automatically chooses the most appropriate one, based on constraints and available data.

**i** An infinite number of relations can be assigned to one particular parameter.

- Add the following relation (belonging to fresh water) in a similar way as described above:

$\rho = 998$

## 5 Creating constraints


The two relations for the density of the water are only valid for their corresponding watertype. Therefore, a **constraint** is added to each relation. A constraint is simply a restriction for the validity of the relation.

Click *Top Goals/Undefined* in the Knowledge browser: all relations in that class are shown (this will work for any class). One can always edit a relation by selecting it and pressing *F2* (or right click and select *Edit*). This is also a useful method to find out which relation you actually selected.

- Right click on the relation  $\rho = 1025$  in the Knowledge browser and select *Constraint -> Add New*. In the upper part of the new window enter the following constraint:

$\text{Watertype\$} = \text{"SW"}$

and click Save:

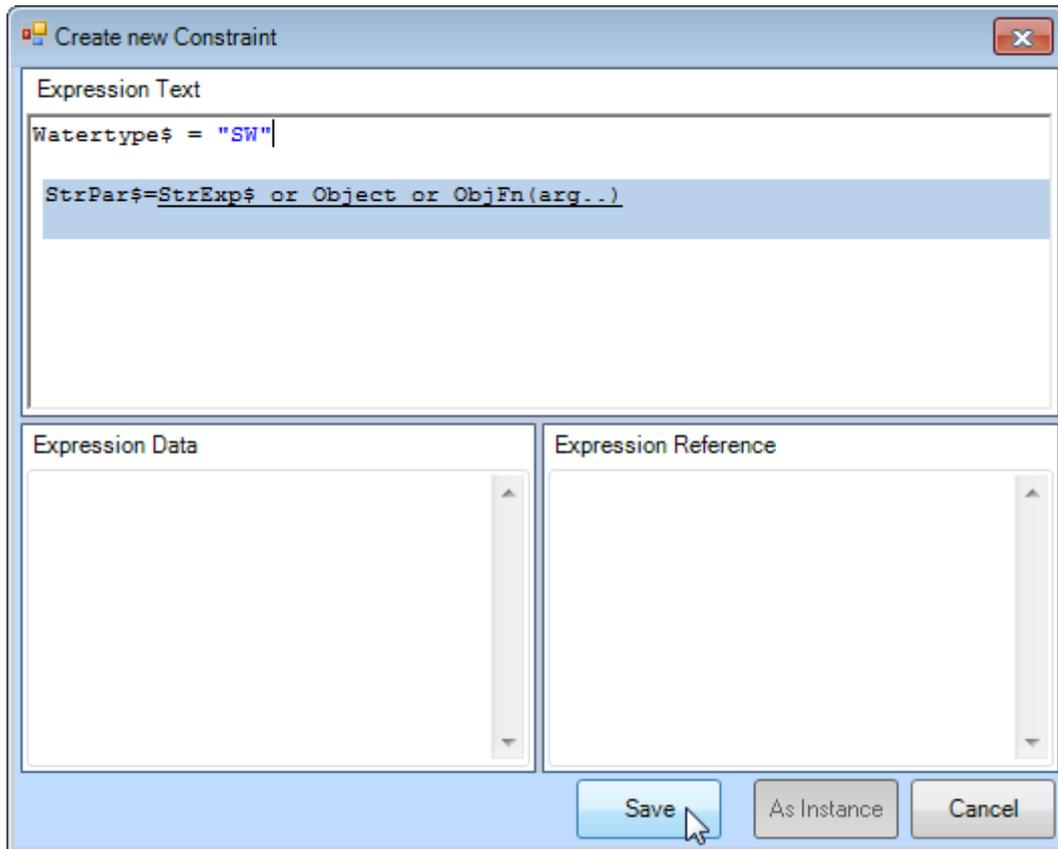

The constraint is now added, and a parameter named `Watertype$` has been created. The `$` at the end of the parameter name makes sure Quaestor recognizes it as a **String** value, and the dimension `Str` is automatically assigned (see also [Quaestor syntax](#)). You have to assign a *Determined-by* value to make it a valid parameter.

- Make sure `Watertype$` is determined by *VR: User Only*, as the user should provide the information concerning the water type.

Repeat the process for the other relation.

- Add the constraint

```
Watertype$ = "FW"
```

```
to the relation Rho = 998.
```

Note that the expression editor assists you with the presentation of existing parameters and [intrinsic functions](#).

Both relations are now connected to the corresponding watertype by means of the value of `Watertype$`.

Whenever `Rho` is needed in the calculation process, Quaestor will note that the watertype is needed to determine the value of `Rho`, and will ask the user for this value (because it is assigned to be *User only*).

When you select a parameter in the upper list, the relations of that particular parameter are visible:

	Frame	[dim]	Reference	Statu
X	Lpp	[m]	length of ship	
X	QKnowledgebaseVersion	Str	Knowledgebase version	
X	Rho	[kg/m <sup>3</sup> ]	water density	
X	T	[m]	depth of shin	

	Frame	[dim]	Reference	Statu
R(x)	Rho = 1025	1		
R(x)	Rho = 998	1		
X	Rho	[kg/m <sup>3</sup> ]	water density	

Moreover, when you select a relation in the lower list, the constraints for this relationship are shown:

	Frame	[dim]	Reference	Statu
X	Rho	[kg/m <sup>3</sup> ]	water density	
X	Watertype\$ = "SW"	1 relations		
@	LASTCHANGED	Version ...	The parameter, relation, constraint or knowledge base ...	
@	QUAESTORVERSION	Version ...	The knowledge base and solution attribute @QUAEST...	

	Frame	[dim]	Reference	Statu
R(x)	Rho = 1025	1		
R(x)	Rho = 998	1		
X	Rho	[kg/m <sup>3</sup> ]	water density	


## 6 Creating a dropdown menu

Because there are only two possible values for `watertype$` (SW or FW), it's easy to integrate a dropdown box.

- Select `watertype$` in the Knowledge Browser, select the *Parameter* tab in the *Properties* window and in the *Reference* box enter the following lines:

FW<EQ>Fresh Water

SW<EQ>Salt Water

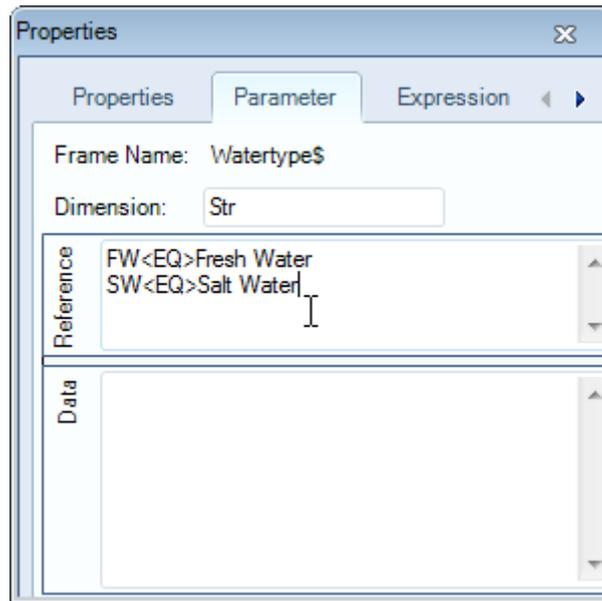

The use of a dropdown box will be clear in a later stage of this tutorial, when calculations are made. Note that you can add the [@EQEXPLAIN](#) attribute in the *Data* box ('data slot') of the `watertype$` parameter in order to display only "Salt Water" and "Fresh Water" are shown in the dropdown (so without SW and FW).

## 7 Creating a relation for the displacement

On the basis of the earlier defined parameters and the block coefficient  $C_b$ , the displacement of the ship can be calculated.

- Add the following relation to the class *Main Dimensions*:

$$DISP = C_b * L_{pp} * B * T * \rho / 1000$$

which defines the displacement of the ship in tons.

Note that two new parameters are created: the block coefficient  $C_b$  and the displacement  $DISP$ . In order to keep the knowledgebase meaningful, it is necessary to provide references, dimensions and determined-by values for these parameters.

- Provide references, dimensions and determined by values for  $C_b$  and  $DISP$ .  $C_b$  has no dimension (-),  $DISP$  should be in tons (t). Just press OK if Quaesator warns that tons is no base dimension (kg), it is just to inform you. We covered this by dividing  $DISP$  by 1000. The determined-by values should be *VR: VR User Only* for  $C_b$ , and *SYS: System/Equation* for  $DISP$ , as the block coefficient is input and the displacement is determined by a relation. Verify that all parameters now have a blue cross instead of a red one in front of them:

	Frame	[dim]	Reference
X	B	[m]	breadth of ship
X	$C_b$	[-]	block coefficient
X	DISP	[t]	displacement
X	$L_{pp}$	[m]	length of ship
X	QKnowledgebaseVersion	Str	Knowledgebase version
X	T	[m]	depth of ship
	Frame	[dim]	Reference
R(x)	$DISP = C_b * L_{pp} * B * T * \rho / 1000$	None	

## 8 Creating a solution

Let's perform your first Quaesator calculation. A solution is always determined by one or more **Top Goals**. A top goal is a parameter (or object) that is your final calculation target, in this tutorial it's the displacement of the ship.

- Select the class *Main Dimensions* in the Knowledge browser. Double click the parameter *DISP*.

Note that the cross in front of *DISP* changed to , indicating that it's a top goal for the calculation.

Calculations and solutions are managed in the **Workbase**. Here, solutions can be created, redone (with different data), examined and deleted.

- In the Workbase window, click the *Compute Goal(s)* button to start the calculation with top goal *DISP*.



The calculation progress is started, and Quaestor first wants to collect all input data in the Workbase window:


Parameter	Value	Dimension
▶ B	-	m
Cb	-	-
Lpp	-	m
T	-	m
Watertype\$	(No value)	Str

Entering data is easy: just type a value for each selected parameter and press enter to switch to the next one.

- Enter the following data for our first calculation:

B = 10    Cb = 0.55    Lpp = 60    T = 6    Watertype\$ = SW (Salt Water)

Note that the input of *Watertype\$* consists of a dropdownbox, which you created above:

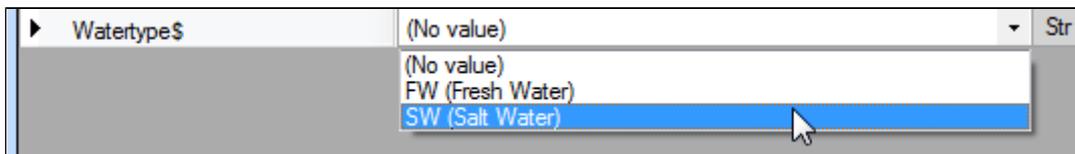


After providing the data you have to press the *Next* button to continue. The actual calculation is started now and because this is a very simple example, the final state is almost immediately shown:

Parameter	Value	Dimension
▶ B	10.00	m
Cb	0.55	-
DISP	2,029.50	t
Lpp	60.00	m
QKnowledgebaseVersion	1.0	Str
Rho	1,025.00	kg/m <sup>3</sup>
T	6.00	m
Watertype\$	SW (Salt Water)	Str

The top goal (*DISP*) is shown, together with all parameters that were used for the calculation. With these input values, the displacement of the ship is about 2030 tons.

## 9 Multiple case solutions

So far, you created one solution, which is shown in the workbase:

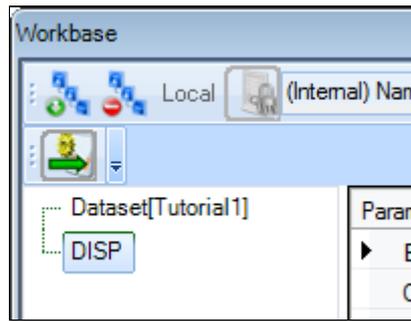

As mentioned in the objective, you will create a dataset of systematically varied ships. You could of course perform several calculations with different input data by hand, but it's much easier to use the ability of QuaesTOR to create **multiple case solutions**. To keep the complexity of this example within reason, you will only vary the breadth and length of the vessel. Please note that QuaesTOR can only perform calculations on ranges of parameters when you already have created a solution.

- In the workbase, select the solution you have already created (called the same as the top-goal parameter *DISP*). Restart the solution by clicking the *Restart Process* or *Data Input* button in the workbase, whichever you see.




- Change the following input:

$$B = 9(0.5)11 \quad L_{pp} = 55(2)69$$

In this way, *B* and *L<sub>pp</sub>* are defined by a range, given the start value, step size and end value. For example, *L<sub>pp</sub>* is defined from 55 to 69 meter, with steps of 2 meter.

QuaesTOR will ask if it should create a case matrix for *L<sub>pp</sub>* (figure 15), click *Yes* (an explanation will follow).

You will see that the single value input is still in the list and the multi case values are in the table part of the *Workbase*. Press the *Next* button to continue.

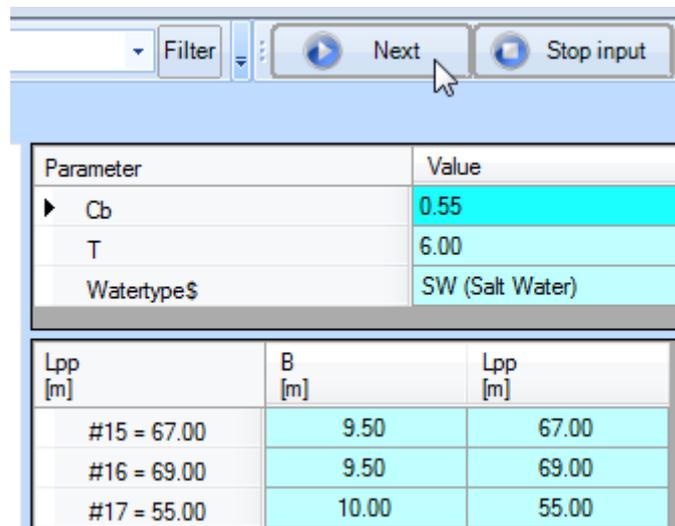

The new solution is now created. The fixed values are again shown in the right hand side of the workbase. The varying parameters (*B* and *L<sub>pp</sub>*) and the corresponding solution for *DISP* are shown in the lower part. Each row is a different **case**, identified by a **case number**(#1, #2, etc.).

Parameter	Value
▶ Cb	0.55
QKnowledgebaseVersion	1.0
Rho	1,025.00
T	6.00

Lpp [m]	B [m]	DISP [t]	Lpp [m]
#15 = 67.00	9.50	2,152.96	67.00
#16 = 69.00	9.50	2,217.23	69.00
#17 = 55.00	10.00	1,860.38	55.00
#18 = 57.00	10.00	1,928.03	57.00
#19 = 59.00	10.00	1,995.68	59.00

What does the Case matrix question mean? Note that the variations of B do not correspond to the variations of L<sub>pp</sub>: there are 5 values for B and 8 values for L<sub>pp</sub>. If you would have answered *No* to the Case matrix question, five variations of B would have been made, each one with the corresponding value of L<sub>pp</sub> (the last 3 L<sub>pp</sub> values would be omitted). In that way, there would be only five cases. As you answered *Yes* to the question, all possible combinations are considered, which results in 5\*8=40 cases. You can easily notice the difference by creating a new solution with the same input values, but now answer *no* to the case matrix question.

 Ranges can be defined in multiple ways:

- Individual values can be separated by comma's: 9, 10, 11 or by semicolons. This depends on the setting of *Tools->Options->Modeler->Use ; instead of , in range input*.
- You can define a range with a begin, an end and number of steps (intervals): 9(&2)11
- You can define a range with a begin, an end and a step size: 9(1)11
- You can define a range with a begin, an end and a step size, including the last element when this is smaller than the whole amount of steps: 9(#1)11.5

## 10 Filter results

As it is, the multiple case solution table is sorted by the breadth of the ship. Now suppose you'd like parameter L<sub>pp</sub> to be the leading parameter in this table.

- In the knowledge browser, select the parameter L<sub>pp</sub>. In the *Properties* window, scroll down to the row *Output to*, and select *HEADER*. Now, refresh the table of the multiple case solution by clicking another solution, and then again the multiple case solution. The table is now headed by L<sub>pp</sub>.

A lot of cases in your solution don't meet the design criteria: a displacement between 2000 and 3000 ton. We could have fixed this by adding a constraint to DISP, but another way is to use a **filter** in the solution table.

- In the workbase, select the last (multiple case) DISP solution, and click the *Filter* button. The Filter window shows. For DISP, select *Range* as filter, fill in *2000* for *Lower bound* and *3000* for *upper bound*. Click the *Apply* button.

Filter values from current object

**Filter values from current object**

Parameter Name	Filter Type	Value	Value
B	None		
DISP	Range	2000	3000
Lpp	None		

Apply Inverse Report Telitab Restore Clear Cancel

Now, only the cases for which  $2000 < DISP < 3000$  are shown in the table. The objective of this tutorial is now completed: you built a dataset of systematically varied ships that meet the design criteria.

## 11 Check

You can verify your results by comparing it to [\[Tutorial 1 Finished\]](#) .

[Continue to tutorial 2 >>](#)